

Product Bulletin

32386 A01

DP1 OPERATING PROCEDURES

STOCKHOLM August 17, 2012

ANNOUNCEMENT

Clarification of DIVATOR DP1 operating procedure

APPLIES TO

DIVATOR DP1 Surface Supply user manual, page 16, 96708G.

DESCRIPTION

When using the DIVATOR DP1 Surface Supply diving system with the DIVATOR MKII SCUBA the divers cylinder valve (Bail out cylinder) shall be opened before the pressurized DP1 surface supply hose is connected to the DIVATOR MK II SCUBA.

If the diver's cylinder valve is opened after the pressurized surface supply hose is connected, the air for the BC, the Dry Suit, and Octopus might be taken from the cylinder worn by the diver and NOT by the DP1 Surface Supply Hose. The breathing air to the diver will still be supplied by the DP1 Surface Supply.

The DP1 surface supply hose as well as the DIVATOR SCUBA shall always be pressurized before being connected together !