

Safety Bulletin

33449A01

Ibsophone Communication Line

Stockholm September 10, 2014

ANNOUNCEMENT

Important information regarding reliving loop on Ibsophone Communication Lines


APPLIES TO

Products Ibsophone Communication Lines

DESCRIPTION

Interspiro has been informed that some Communication Lines have been delivered with a too short reliving loop. This can make the reliving loop slip on the communication line when subjected to force. In order to make sure that the reliving loop on the communication line is correctly made, the following measurement can be done.

- 1) Stretch the loop firmly.
- 2) Measure the total length of the loop as shown on the picture below. The measure from the beginning of the loop should be 8 +/- 1 cm (7 9 cm).

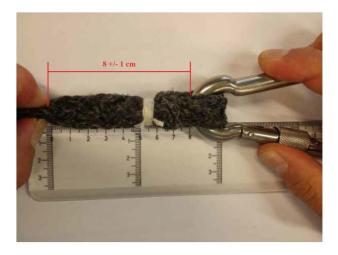

If the loop is not correct, the communication Line shall be sent to Interspiro for corrective actions.

INTERSPIRO GROUP

Lidingö, Sweden