ENGLISH



# Incharge 50

### User Manual

35330C01

#### Copyright © 2019 Interspiro

This publication contains or refers to proprietary information which is protected by copyright. All rights are reserved. Interspiro®, Oxydive® and Divator® are registered trademarks belonging to Interspiro. This publication may not be copied, photocopied, reproduced, translated, or converted to any electronic or machinereadable form in whole or in part, without prior written approval from Interspiro.

# **Table of Contents**

Safety notice	5
Installation	6
Functions	9

# Safety notice

The product must only be used with other approved Interspiro products. The product must only be used by personnel trained in the use of the equipment.



### INTERSPIRO IS NOT RESPONSIBLE FOR:

combinations of products, unless put to market by Interspiro

changes or adaptations made to the product by a third party


Changes to this document – necessitated by typographical errors, inaccuracies of current information or improvements and changes of equipment – may be made at any time without prior notice. Always refer to www.interspiro.com for product updates, document updates and service bulletins. The guarantees and warranties specified in the conditions of sale are not extended by this Safety notice.

The Incharge is used together with a SCBA telemitry unit fitted to "SpiroGuide", "Incurve-E" and "S8" / "S9" breathing apparatus. Optional accessories are Incharge RFID system and HUD.

This manual describes the functionality of the Incharge 50 software. For more information about how to use the Incharge system together with the SCBA see the SCBA User manual.

## Installation


1. Double click on Incharge installer.

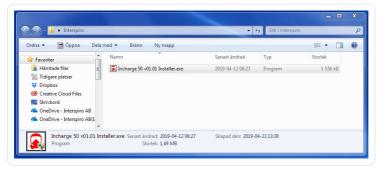

- 2. If needed allow the program to run.
- 3. Choose your language.

	J	Please select a language.	
English	English	English	•

4. Choose the users that should have acess to the program and then click "Next".

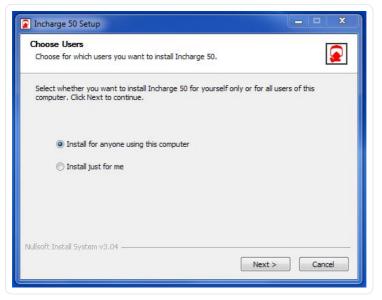

5. Use the default folder or choose another one and then click "Install".



6. Click "Close".

Close Cancel

7. Now you have a desktop shortcut to the Incharge 50 software. Click on the shortcut.



# **Functions**

### Firefighter status field



- 1. Red colour on the status bar indicates that the alarm has been activated.
- 2. Yellow colour on the status bar indicates that there is a warning, for example "Loss of Link".
- 3. Cylinder pressure
- 4. Name of firefighter
- 5. Absorbed temperature
- 6. Signal strength
- 7. Team name
- 8. Panic alarm
- 9. Elapsed time since start of the program
- 10. SCBA not activated
- 11. Time
- 12. Non-movement alarm activated on SCBA
- 13. Loss of Link
- 14. Full screen / window

- 15. Edit teams
- 16. Activate firefighter
- 17. Execute button

#### Settings

1. Click on "SETTINGS".

<i>titit</i>	TELEMETRY SETTINGS	EXIT
James Brown	N.	

2. Choose your settings.

Click and hold "SAVE CHANGES" if you want to save your new settings. If you don't want to save any new settings, click and hold "REVERT TO SAVED".

	TELEMETRY <u>SETTINGS</u> DVT
SCALE:	75% 100% 123% 150%
START MODE: SOUND:	FULL SCREEN WINDOWED ENABLED DISABLED
TEMPERATURE: PRESSURE:	CELSIUS FAHRENHEIT BAR PSI
SCROLLBAR: TEAM NAME:	HORIZONTAL VERTICAL ON LEFT ON TOP
RETAIN TEAM CHANGES: NETWORK ID:	NO YES - 1 +
REVERT TO SAVED	SAVE CHANGES

#### Send evacuation order to one person

1. Click and hold until a white and then a orange flash has gone from the left to the right.



2. When "SEND EVAC?" is showing, click and hold the execute button until the white flash has gone from left to right.

Additionation of the second se	Lorna Blackburn Lorna Blackburn Rowan Hardin Schola Bate we at Horses Sheila Storey
14:08:25 00:00:26	

3. When the EVAC order is sent, a red symbol appears.



4. When the firefighter has received the EVAC order, the symbol becomes yellow.



5. When the firefighter has confirmed the EVAC order, the symbol becomes green.



#### Send evacuation order to all

Click and hold on the evacuation button to send evacuation order to all firefighters.

Click and hold the execute button until the white flash has gone from left to right to execute the command.





#### **Confirm alarms**

1. Click and hold on the person you want to confirm until the white flash has gone from left to right.




2. Click and hold the execute button until the white flash has gone from left to right to execute the command.



### Change team

- 1. Double-click on the person who should change team.
- 2. Choose the team you want the person to belong to.

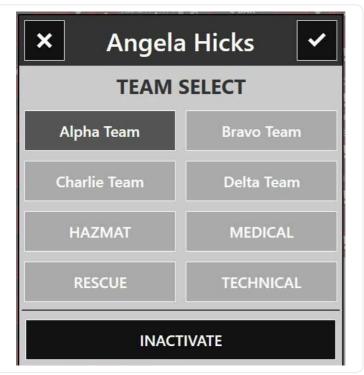

3. Click and hold on the execute button (top right) to save the selection.

### Inactivate firefighter

- 1. Double-click on the person who should be inactivated.
- 2. Click and hold until a red flash has gone from the left to the right.

a c x		ŔŔŔ		TELEMETRY SETTINGS EXIT
Angela Hicks 197 saa				
Jordon Rush	34°C , all 164 8A3	× Faris She	pard 🖌	
Zaid Frank 203 RAM	-17% atl 227 846	TEAM SEL	ECT	
	att 165 EAT	Alpha Team	Bravo Team	
	245 .all 149 KA	Charlie Team	Delta Team	
Elisita Sowyer 253 BAR &	1170 atl g 120 EAU	HAZMAT	MEDICAL	
139 BAR Peter Goodwin	215 EAI	RESCUE	TECHNICAL	
	10°C atl 272.840			Kaci Magana 278.84K Sec. all Matakai Jefferson
200 8.42	297 all 291 BA		···	
		Rita Zuniga		
	200 BAR			and
8-10 R-11 R-12 R-13				

3. If all team members are inactivated, the whole team will be removed from the display.

### Activate firefighter

1. Click and hold until a white flash has gone from the left to the right.



Incharge 50

2. Click on the "+" button to activate the firefighter.




3. Click and hold on the execute button (top right) to save the selection.

😰 lecharge SD			- • ×
ð 🛙 🕅		<i>titit</i>	TELEMETRY SETTINGS EXIT
Apha Tean	Angelo Hols 2000 \$\$ problem Drant Vocapez 175.00 \$\$ problem 22.01 Vrank 146.00 \$\$ problem \$\$ problem \$\$ problem 157.00 \$\$ problem 157.00	All import Abbre footbar Cordet Mayer water in all in and all interesting of the second of the s	Candida Hongo United Trajilio Overa Trajilio Vietaca & mail Leóphton Ellio mail Maria & Barrai Maria Antaria
Bravo Team	Eisbas Sanger es aux Eugene Hacing seads & color pter Goodwin 2000 at a color seads & color to subt to	ACTIVATE	a and a a a a a a a a a a a a a a a a a
Charlte Team	Add Lubero Ferhari Hunt 27 BAR Bar Aunt Xay Raha Yur BAR I we all Lola-Rose Griffin 19 BAR I R Aut		Rec Magara Malaia Seference Malaia Sefer
R-10 R-11 R-12 atl atl 81	8-13 .al	<mark>14:30:33</mark> ഡണ്ടാ	✓


4. The firefighter will now be reactivated on the display.

#### Edit teams


1. Click and hold the "Edit teams" button to edit teams.

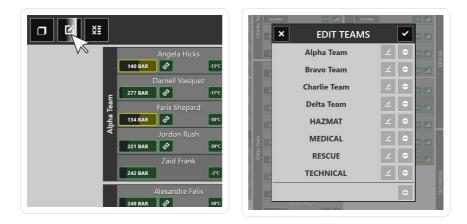

2. Click the "+" button to add a new team.

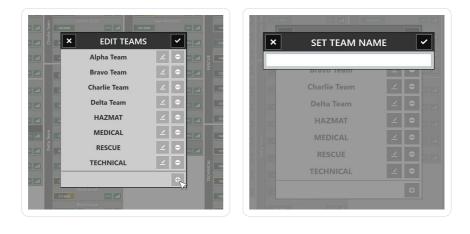

 Write the team name you wish to have. Click and hold the execute button (top right) in the "Set team name" window to create the new team. Click and hold the execute button (top right) in the "Edit teams" window to save the team.

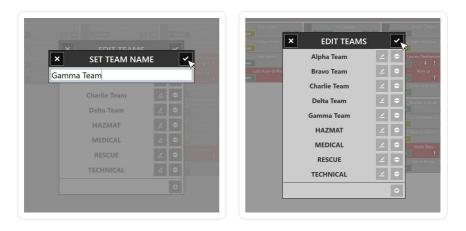

4. Click the "Pen" button to rename the team.

Type the new name and click and hold the execute button (top right) in the "Set team name" window.

Click and hold the execute button (top right) in the "Edit teams" window to save the new team name.

EDIT TEAMS		~	arc ant	ie team			
Alpha Team	2		∞al ∞al ÿ		×	SET TEAM NA	ME
Bravo Team	2	•	RESC	s at	MEDICS	pravo ream	<u> </u>
Charlie Team	2	•	95 at	s at		Charlie Team	
Delta Team	2	•	se	र विष		Delta Team	
HAZMAT	2	•	~ .ul	e at		HAZMAT	
MEDICAL	*	•	ex	a at		MEDICAL	
RESCUE				Dette Dette		RESCUE	
TECHNICAL		•	stall a	s at		TECHNICAL	
			INIC				

 To remove a team: click and hold "-" button.
 NOTE: You can only remove teams that are empty. Follow the information in section "Change team" to transfer people between teams.

### Exit program

Click on "EXIT".



Click and hold "EXIT TO DESKTOP".

2 hores	TELEMETRY	SETTINGS .	EXTT
INCHARGE 50			
2019 64 08 173-414 UTC 76/514/80/448bi-050-6177-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86/677-86			
$\sim$			
ЕХІТ ТО DESKTOP			



Keeps You Breathing