

Product updates



Product news



Service advice



Safety advice



Clarification regarding service life


In the new user manual (revision D) the service life limitations have been clarified:

The maximum service life is 10 years for the positioning belt. The complete belt must be replaced after 10 years of use. It can be stored for a maximum of 2 years before the first use.

The date of manufacture is clearly marked on the label.



#Inposition

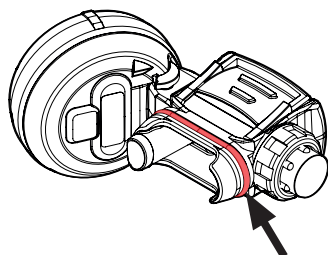

Changed connection O-ring


The new O-ring for Inspire breathing valves and Inspire filter adapters has an increased thickness (0.1 mm) for improved sealing properties. The spare part number is unchanged (460200133).

Service kits are updated to include the new O-ring.

Changing the O-ring to the new version is recommended if you experience problems to pass the tightness test for the Inspire mask.



#Inspire

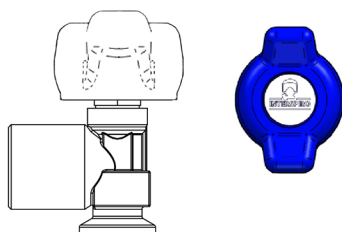


New hand wheel type for K44 in-line valve

The new hand wheel has two "wings" to prevent unintentional closing.



#32309-01

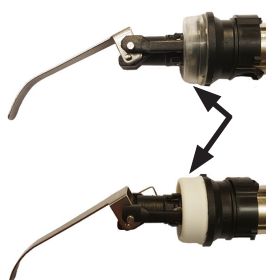

Changed sealing sleeve colour

The valve inserts on the breathing valves S, Inspire and Respire have a rubber sealing sleeve. The colour of this sleeve has changed from white to transparent.



#S

#Inspire

#Respire