



Product news



Service advice



Safety advice

Helmet adapter - End of life

The helmet adapter part number 336900280 is replaced with the adjustable helmet adapter 31784-51.




#facemasks



336900280



31784-51

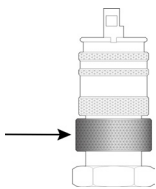


Locking ring

A reminder: When disconnecting the "Interspiro" type female coupling, the locking ring must be unscrewed completely before the coupling is released to avoid free flow.



#SCBA

New important step in visual inspection

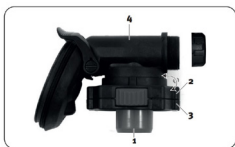

A new step in the annual visual inspection part of the service manual for breathing valve S-ESA has been added. This step is regarding the housing and how to check the integrity of the housing.



#S-ESA

New washing plug



This new washing plug fits the newly produced Inspire-FB breathing valve as well as all other Inspire breathing valves.

Part no: 33438-52



#Inspire