



Product news




Service advice



Safety advice

New colour of o-ring in HP Swivel

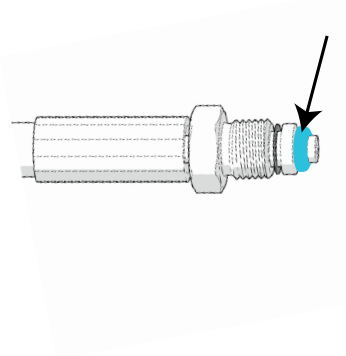

The o-ring in the HP Swivel has been replaced, the new o-ring is now transparent.

Affected parts and products:

- High pressure swivel in plug-in regulator units
- Friction washer kit (part no. 460190192)



#Incurve (all versions)

#QS (all versions)

#Spiromatic 90U


#Spiroguide II



Cylinder quick coupling

The cylinder quick coupling is locked when it is pressurized. Make sure to fully depressurize the SCBA before attempting to disconnect the coupling.

The quick coupling can be damaged if you try to disconnect it with force before it is fully depressurized.

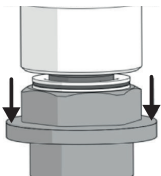

#Incurve (all versions)

#QS (all versions)

#Spiroguide II



Cleaning of Spiroguide II

Spiroguide II electronics have been upgraded to withstand cleaning in dishwashers. The display window to the DDU is made of a new material and has a yellow tint. If the unit has the new display it is machine washable.

If your unit is from 2019 (or newer) it can be upgraded with this new display window, to make it machine washable. Part no. of new display window: 99876-51

If your unit has the old version of the window and is older than 2019, it has to undergo service to upgrade it by replacing the BAC lid as well as the display window, to make it washable.



#Spiroguide II

#Incurve-E